











User Guide of the Test Box A

Date: 2023.12.22

1. Image Setting to SD Card


1. Image resolution: **360x360**;
2. Image Format: **bmp**, size:380KB;
3. Replace image: Use **numbers** such as **1, 2, 3...** for naming, total of **10** images can be placed, and the order of display images is according to the name.

Name	修改日期	Format	Size
 1	2021/5/10 11:31	BMP 文件	380 KB
 2	2021/5/10 11:40	BMP 文件	380 KB
 3	2023/12/22 11:56	BMP 文件	380 KB
 4	2023/12/22 10:24	BMP 文件	380 KB
 5	2023/12/22 10:25	BMP 文件	380 KB
 6	2023/12/22 12:01	BMP 文件	380 KB
 7	2023/12/22 11:57	BMP 文件	380 KB
 8	2023/12/22 12:01	BMP 文件	380 KB
 9	2023/12/22 12:09	BMP 文件	380 KB
 10	2023/12/22 12:11	BMP 文件	380 KB

2. Operation of Test Box

Connection :

1. Display connect to the connector of the interface AD board;
2. Plug in the power cable to the test box (power: 12V)

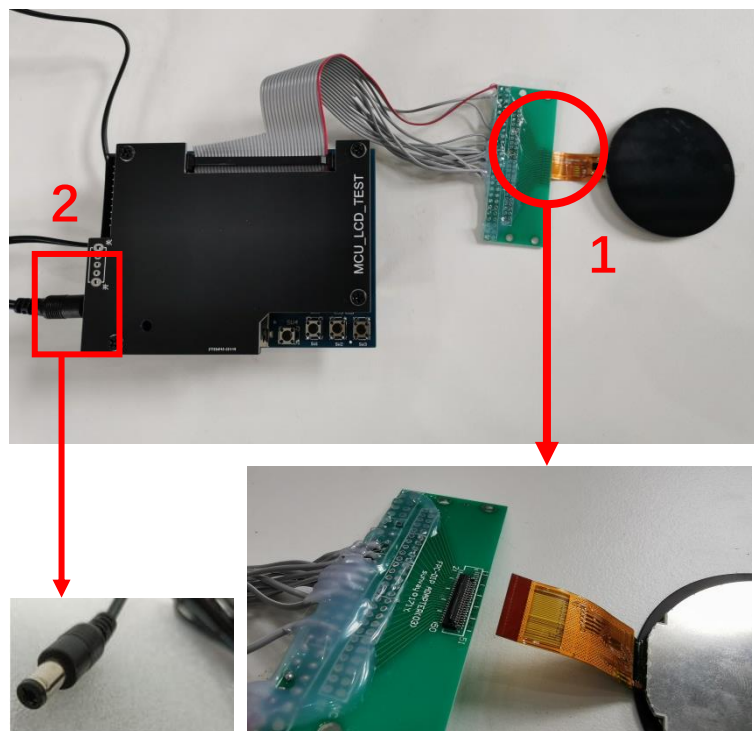

Operation:

- 1) Put SD card into the slot (we put it inside already before ship)
- 2) Turn the switch "OFF/ON" for box power off/on;
- 3) Press
 - "SW4" for reset
 - "SW1" for going back,
 - "SW2" for images auto-play.
 - "SW3" for going to next

